

FIG. 1

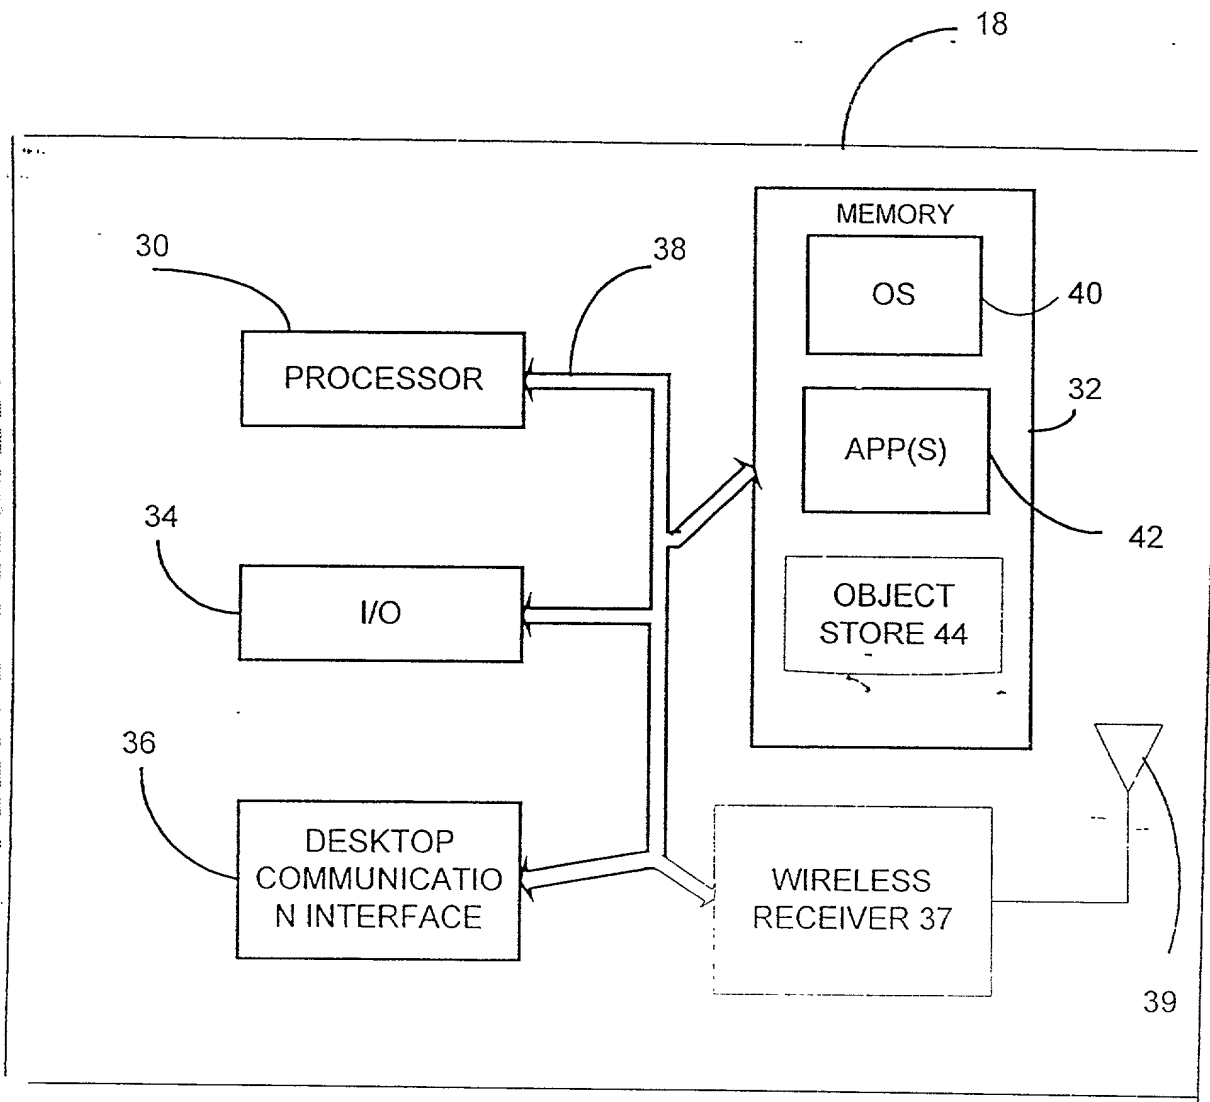 


FIG.2

FIG. 3 is a perspective view of the device 18 in an open position. The device 18 includes a display 45 and a keypad 43. A stylus 46 is shown pointing at the keypad 43.

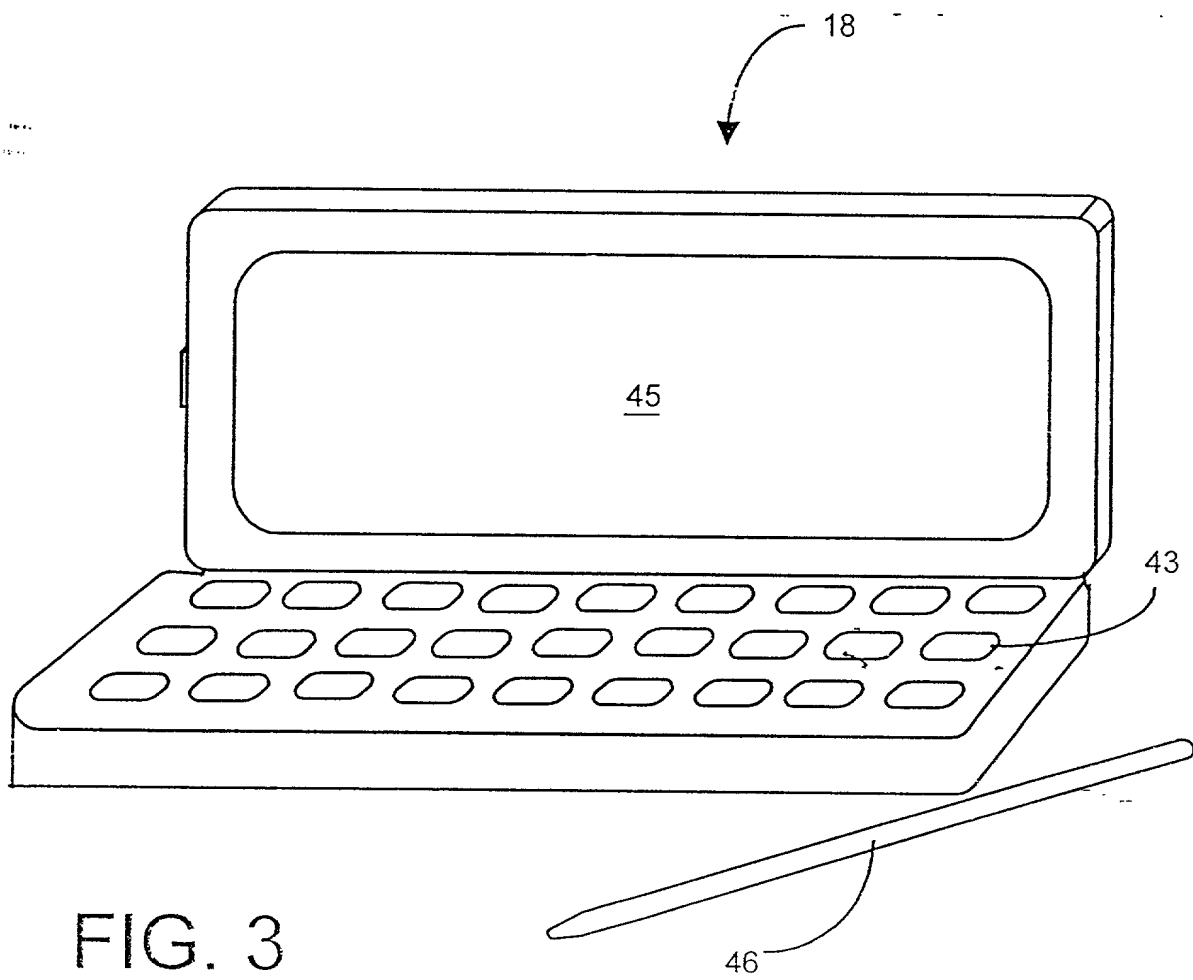 


FIG. 3

FIG. 4 is a schematic diagram of a device 10, showing a display 34, a touch sensor 42, a speaker 40, and a microphone 36. The device 10 is shown in a perspective view, with the display 34 and touch sensor 42 being the main components. The speaker 40 and microphone 36 are located at the bottom of the device. The touch sensor 42 is shown as a curved line, indicating its shape and position relative to the display 34. The speaker 40 and microphone 36 are shown as rectangular shapes, indicating their shape and position relative to the device 10.

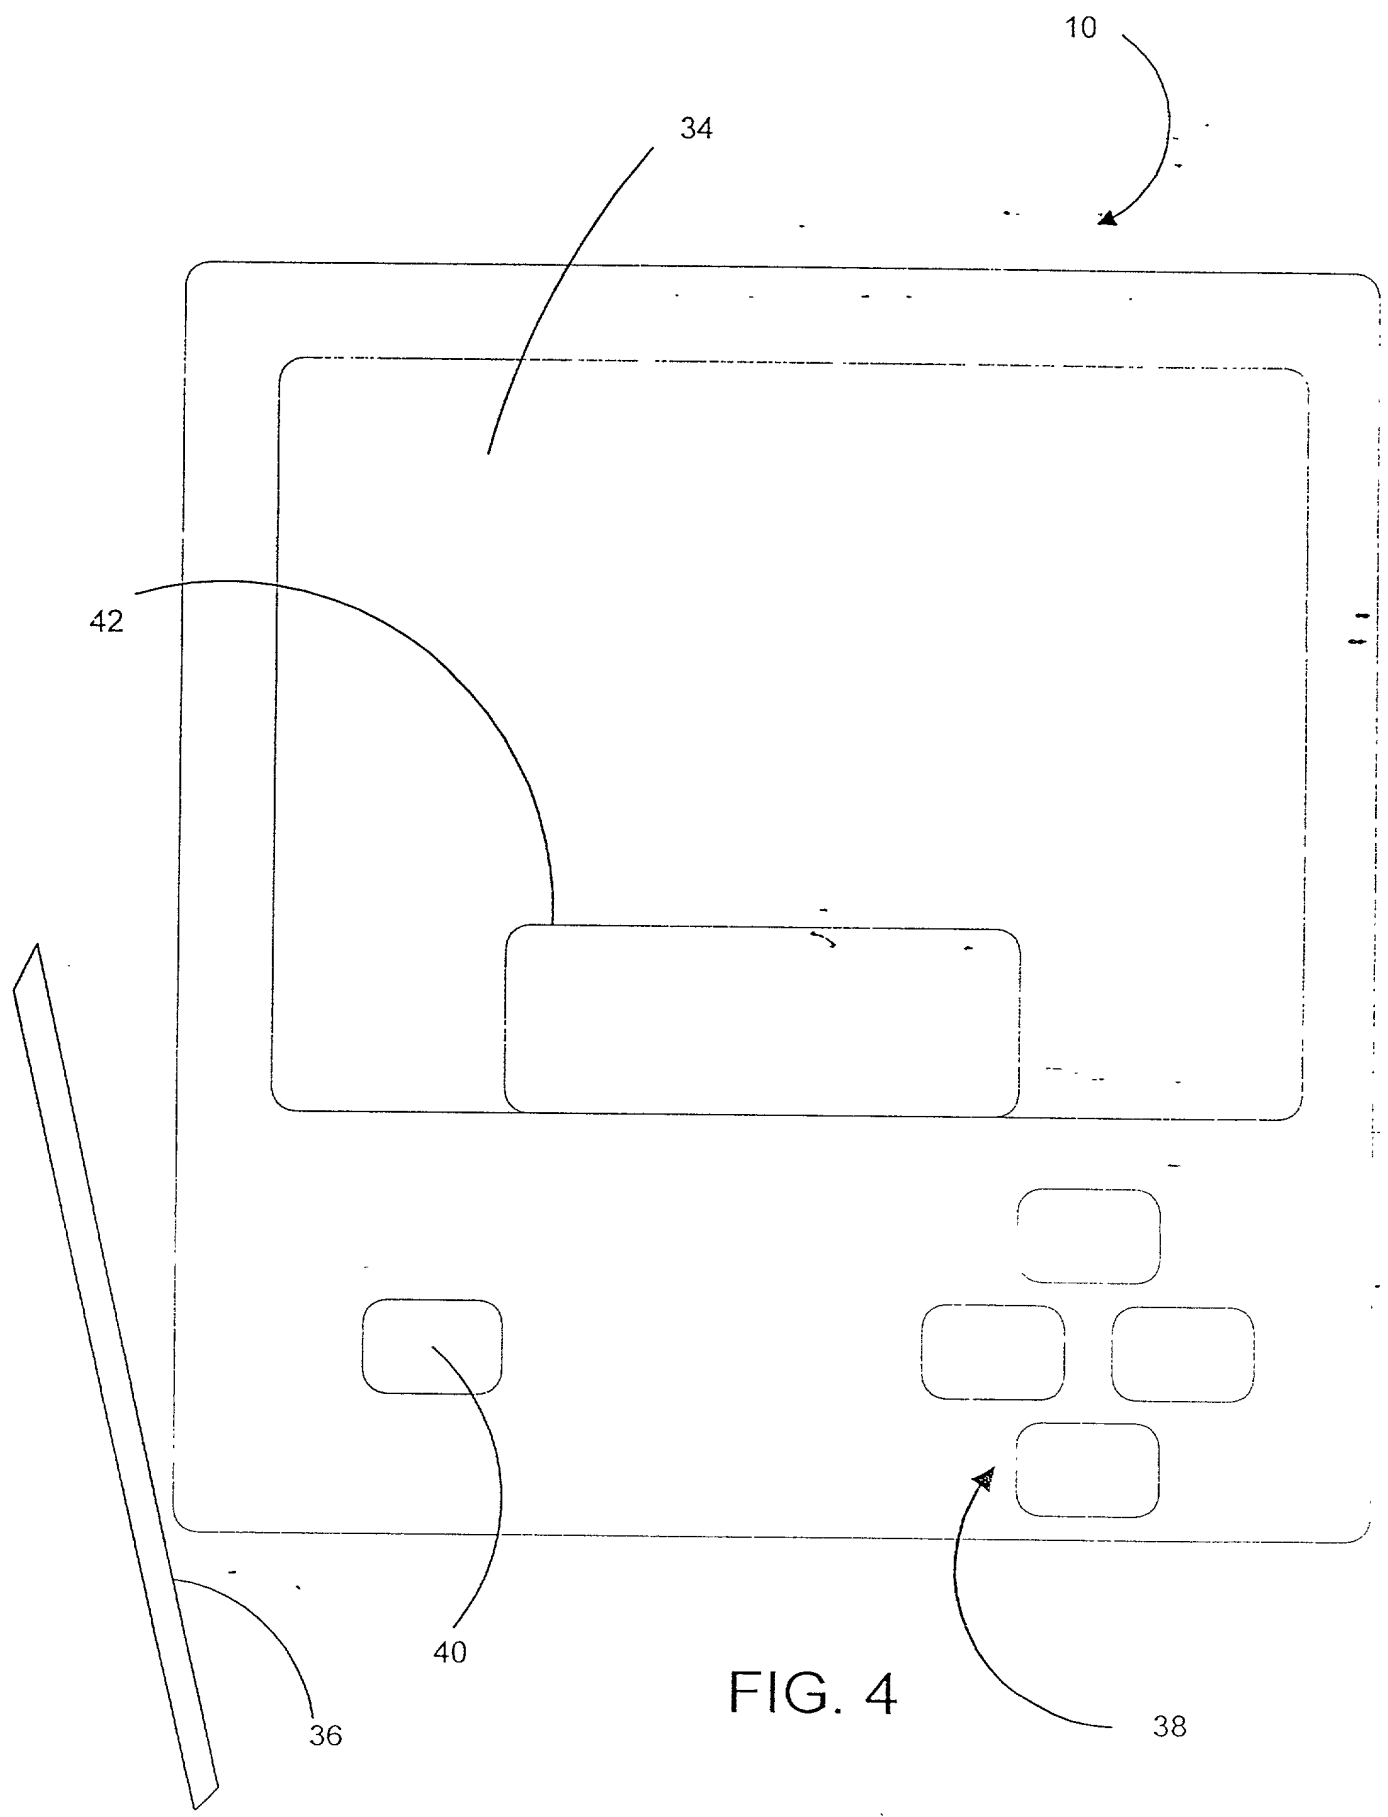 


FIG. 4

FIG. 5

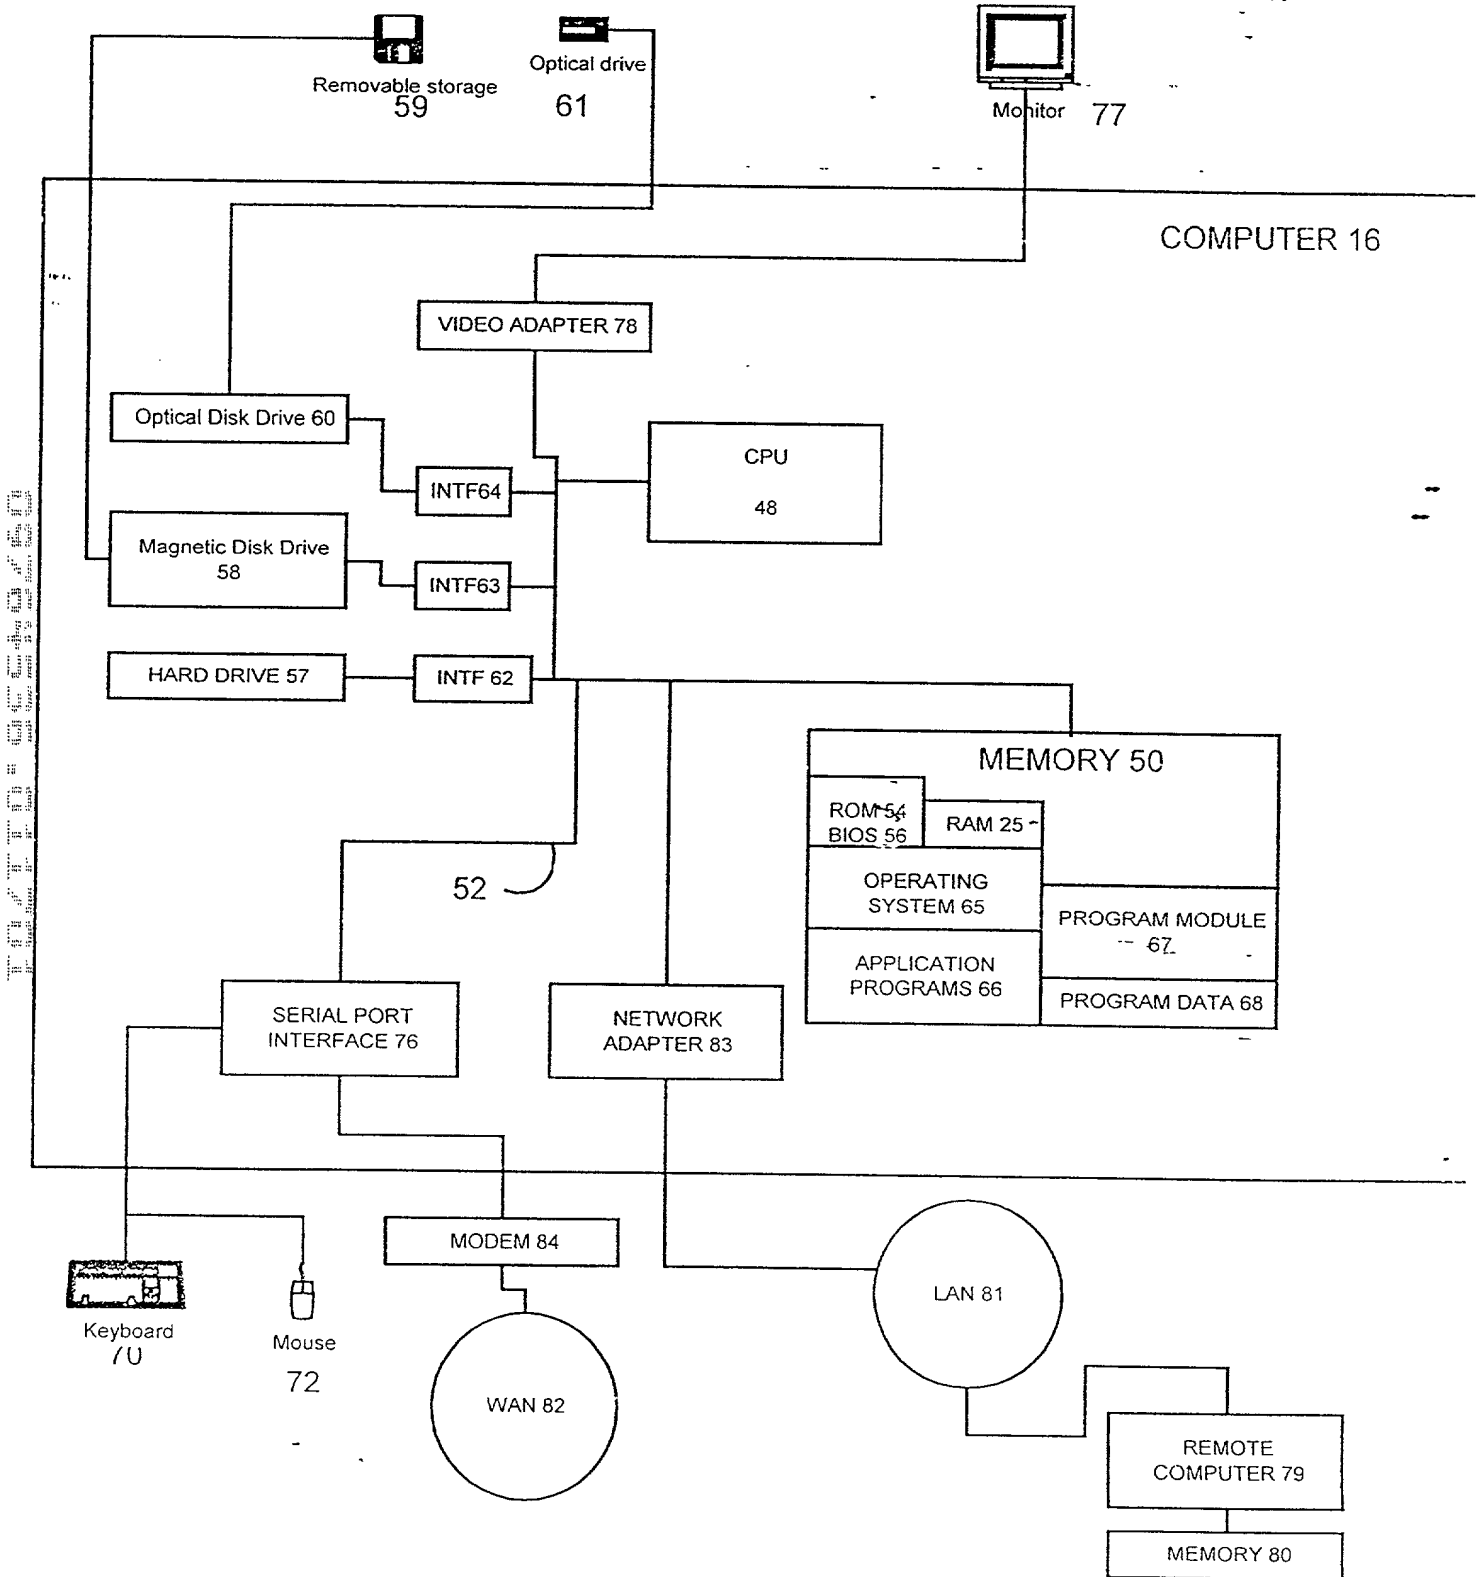 
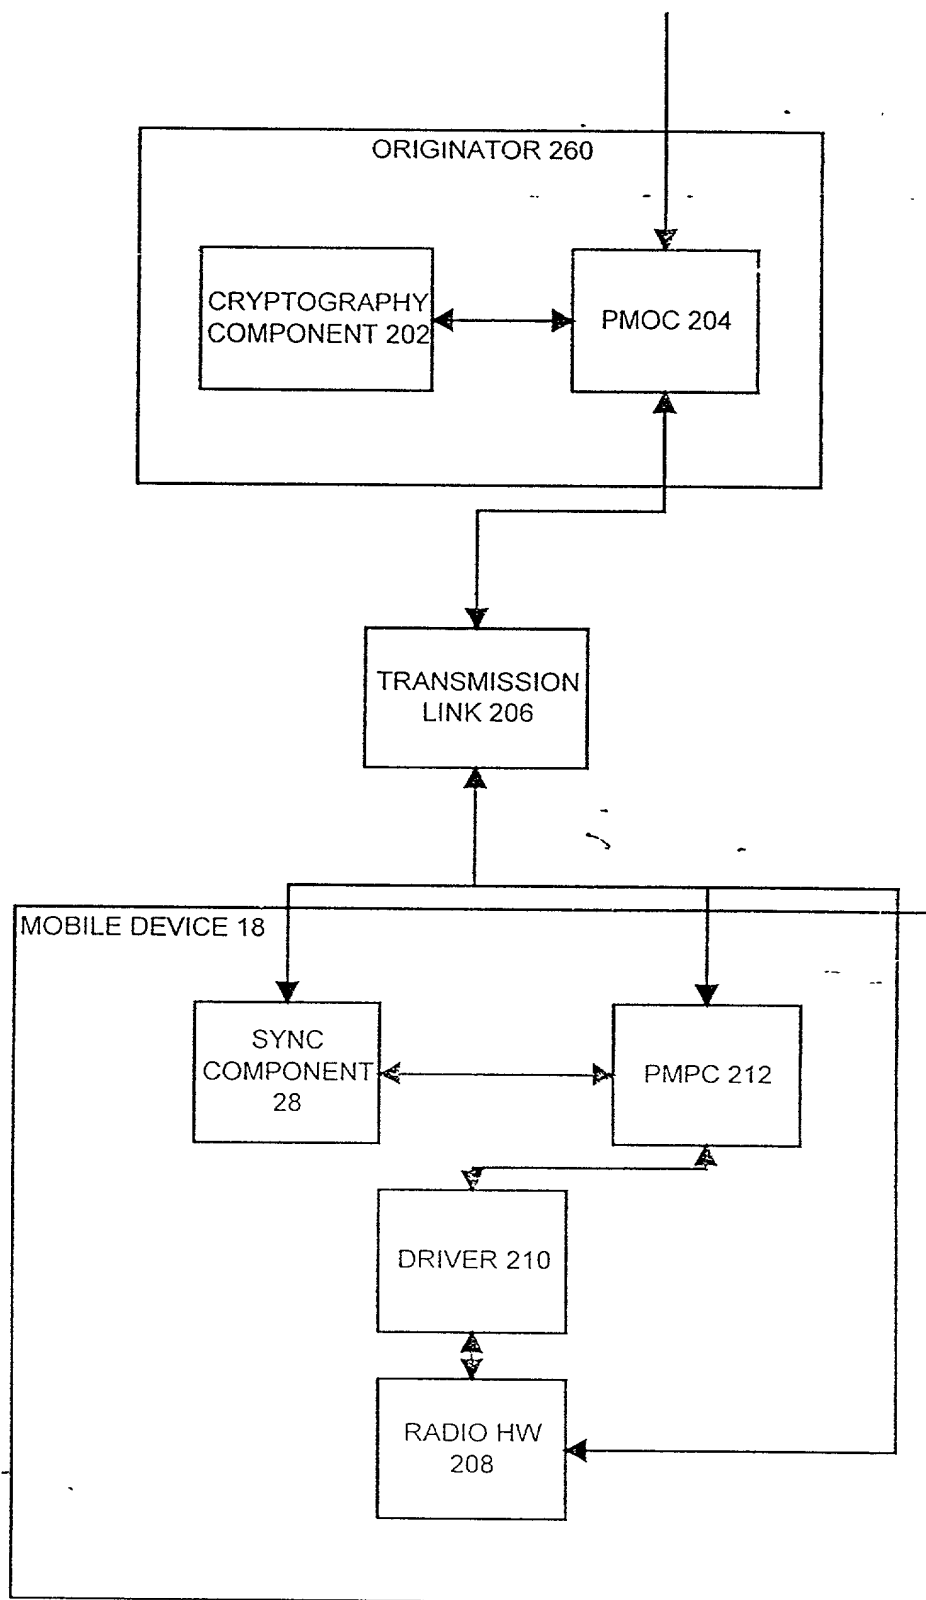 


FIG. 6

PROGRAMMING DATA



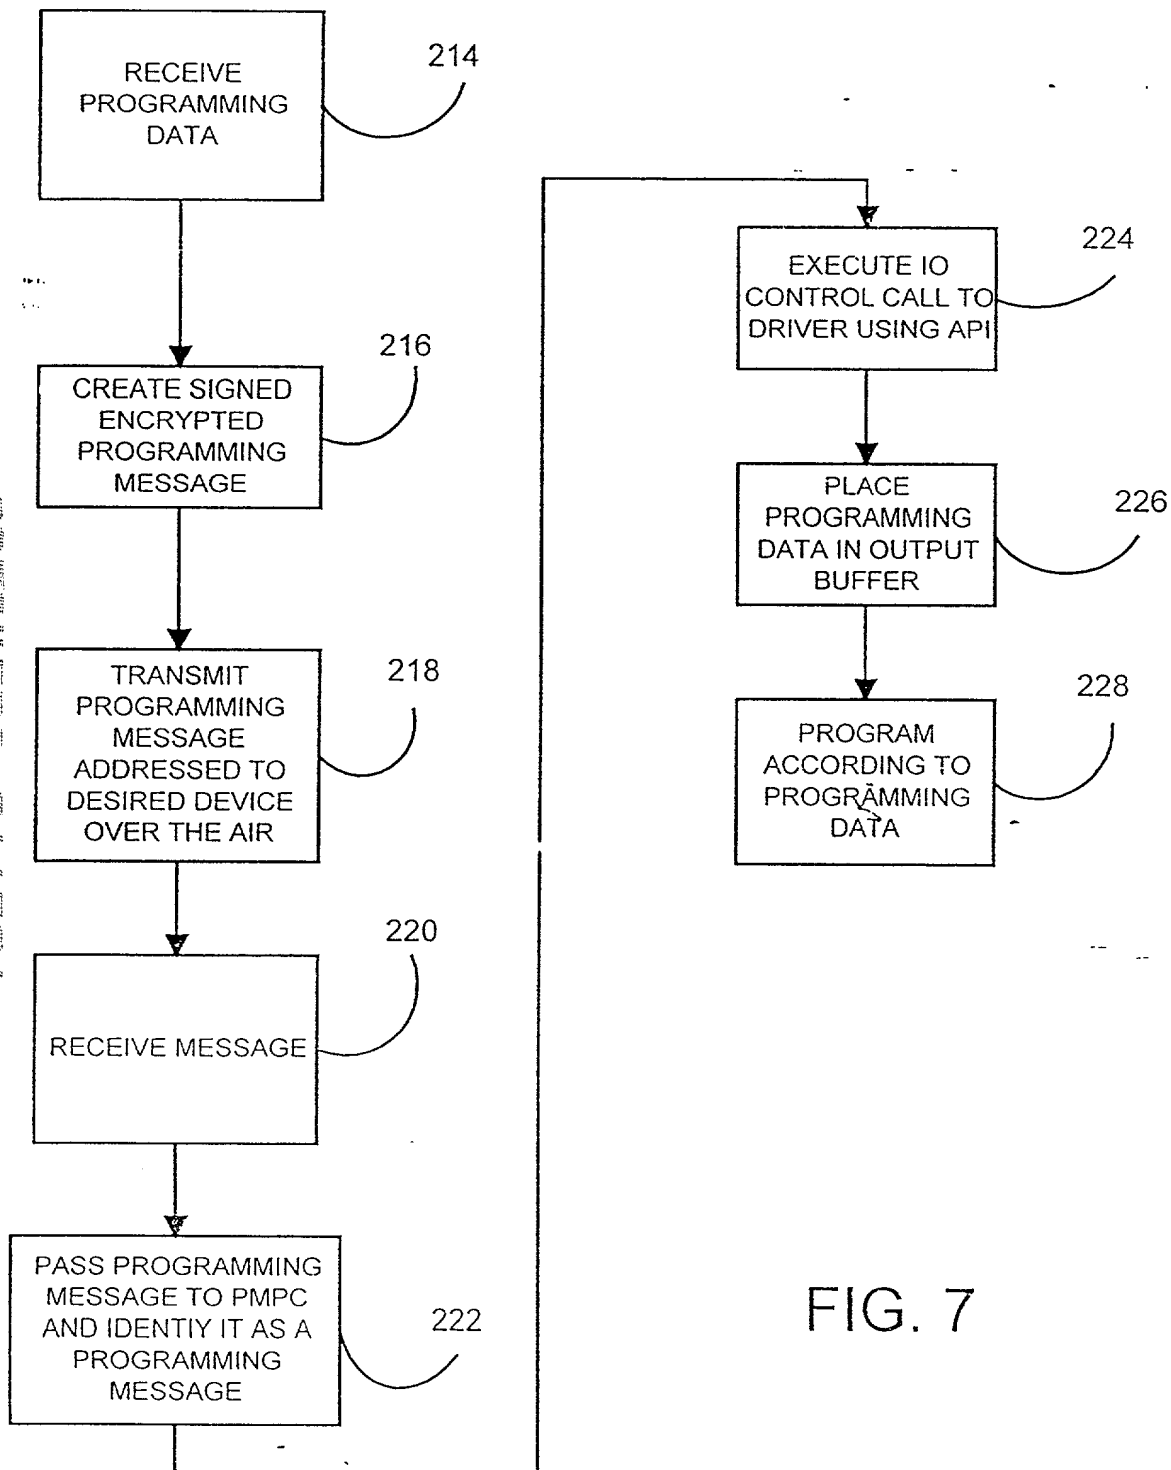 


FIG. 7

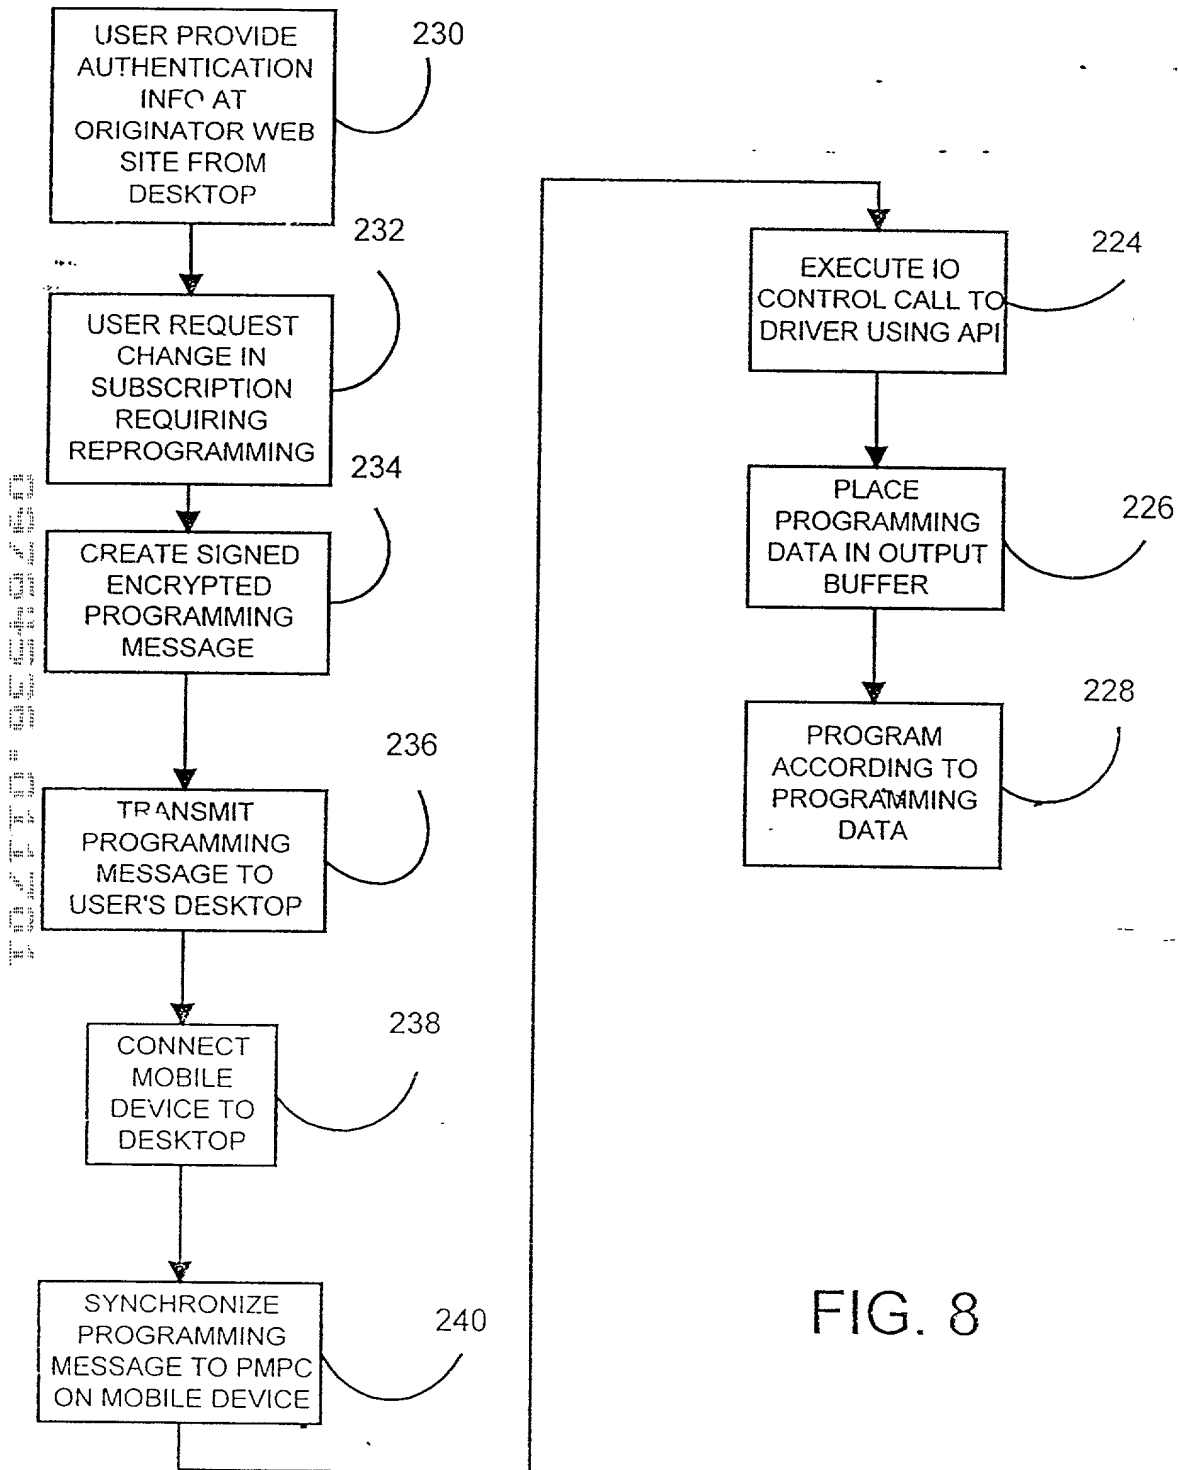 
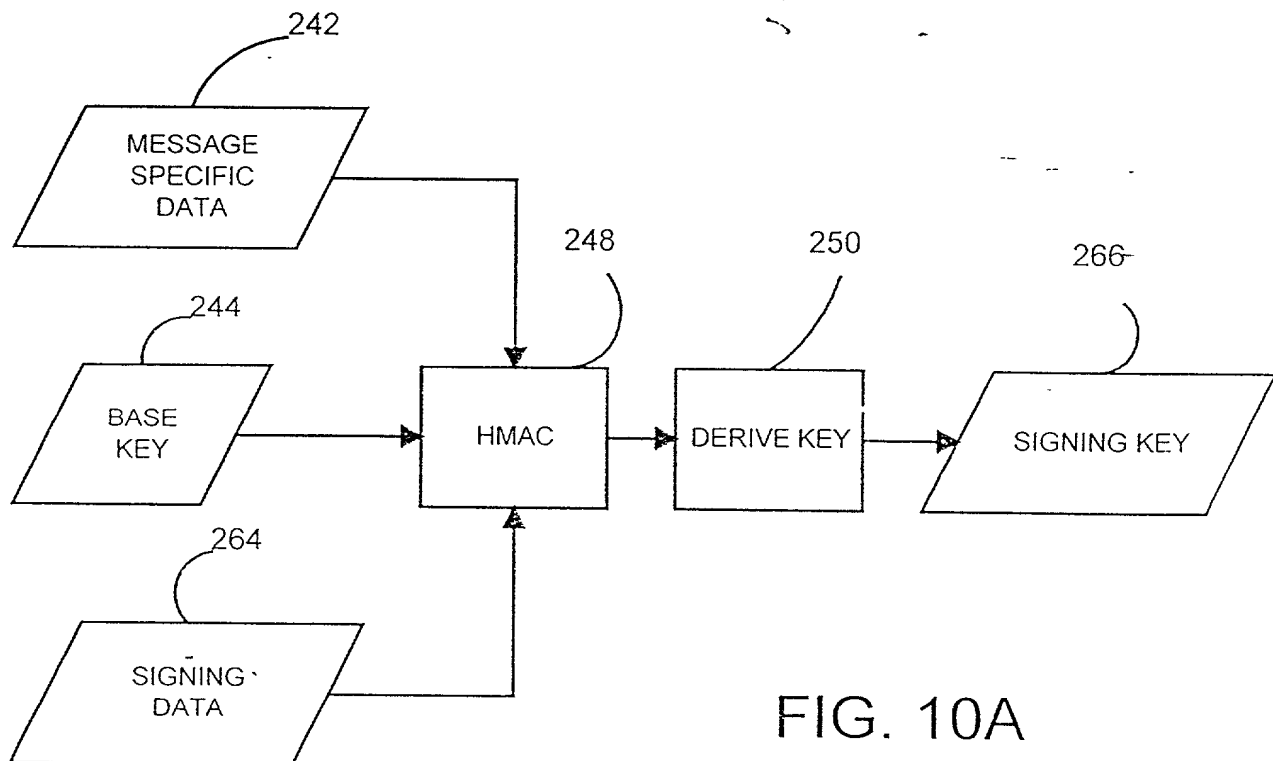 
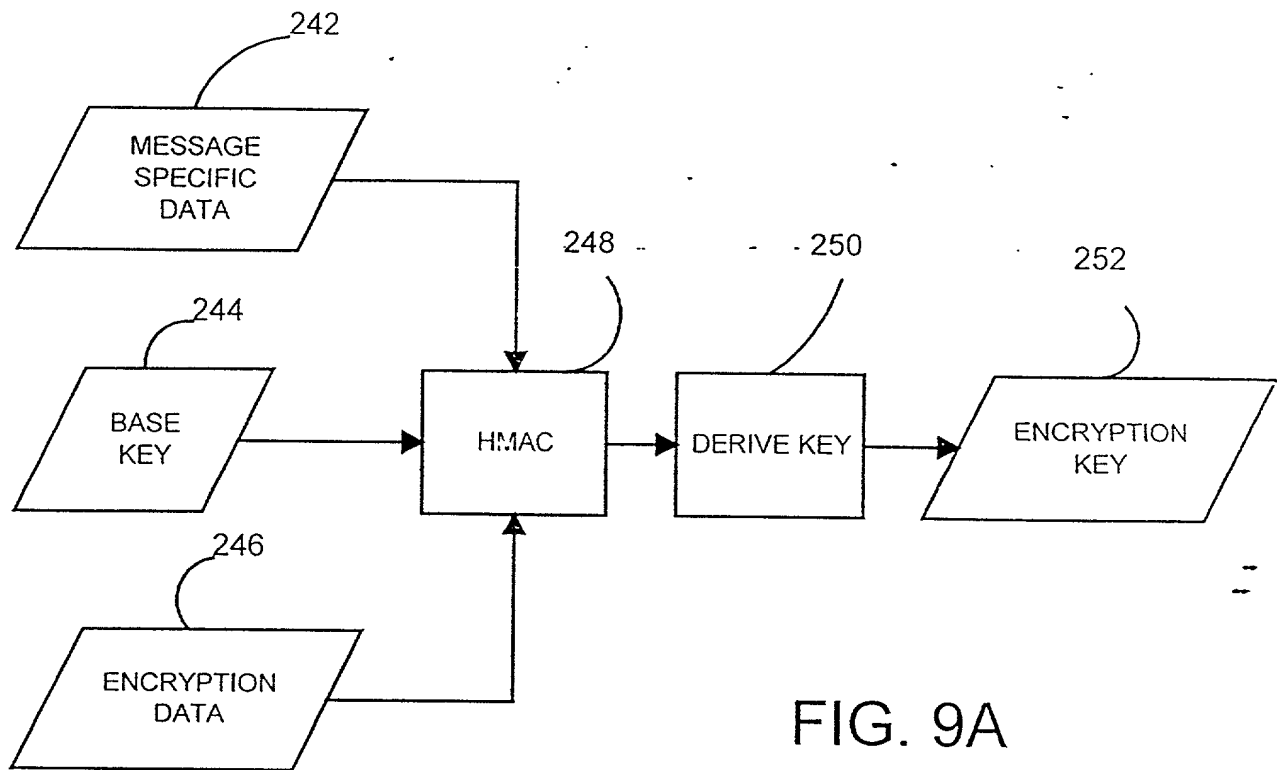 


FIG. 8



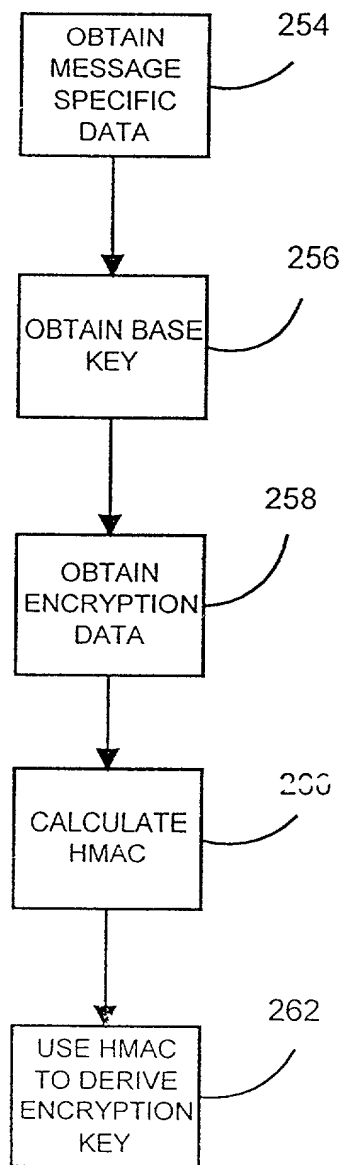 


FIG. 9B

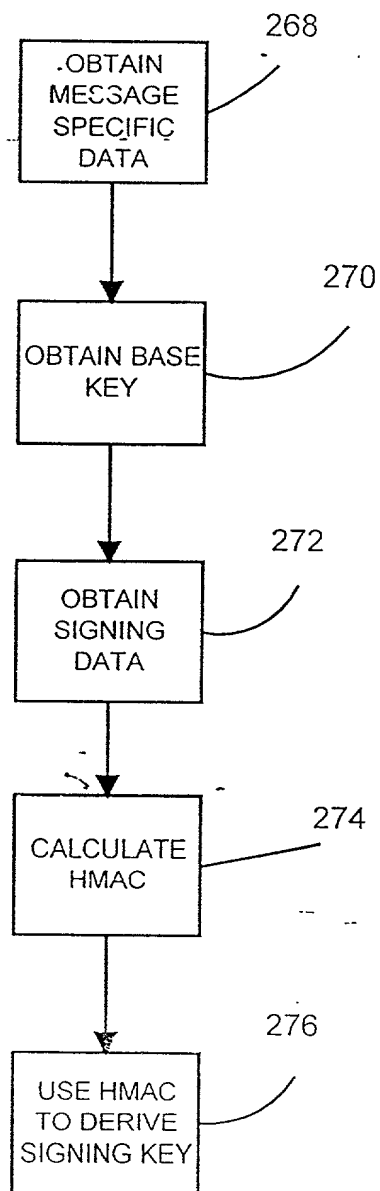 
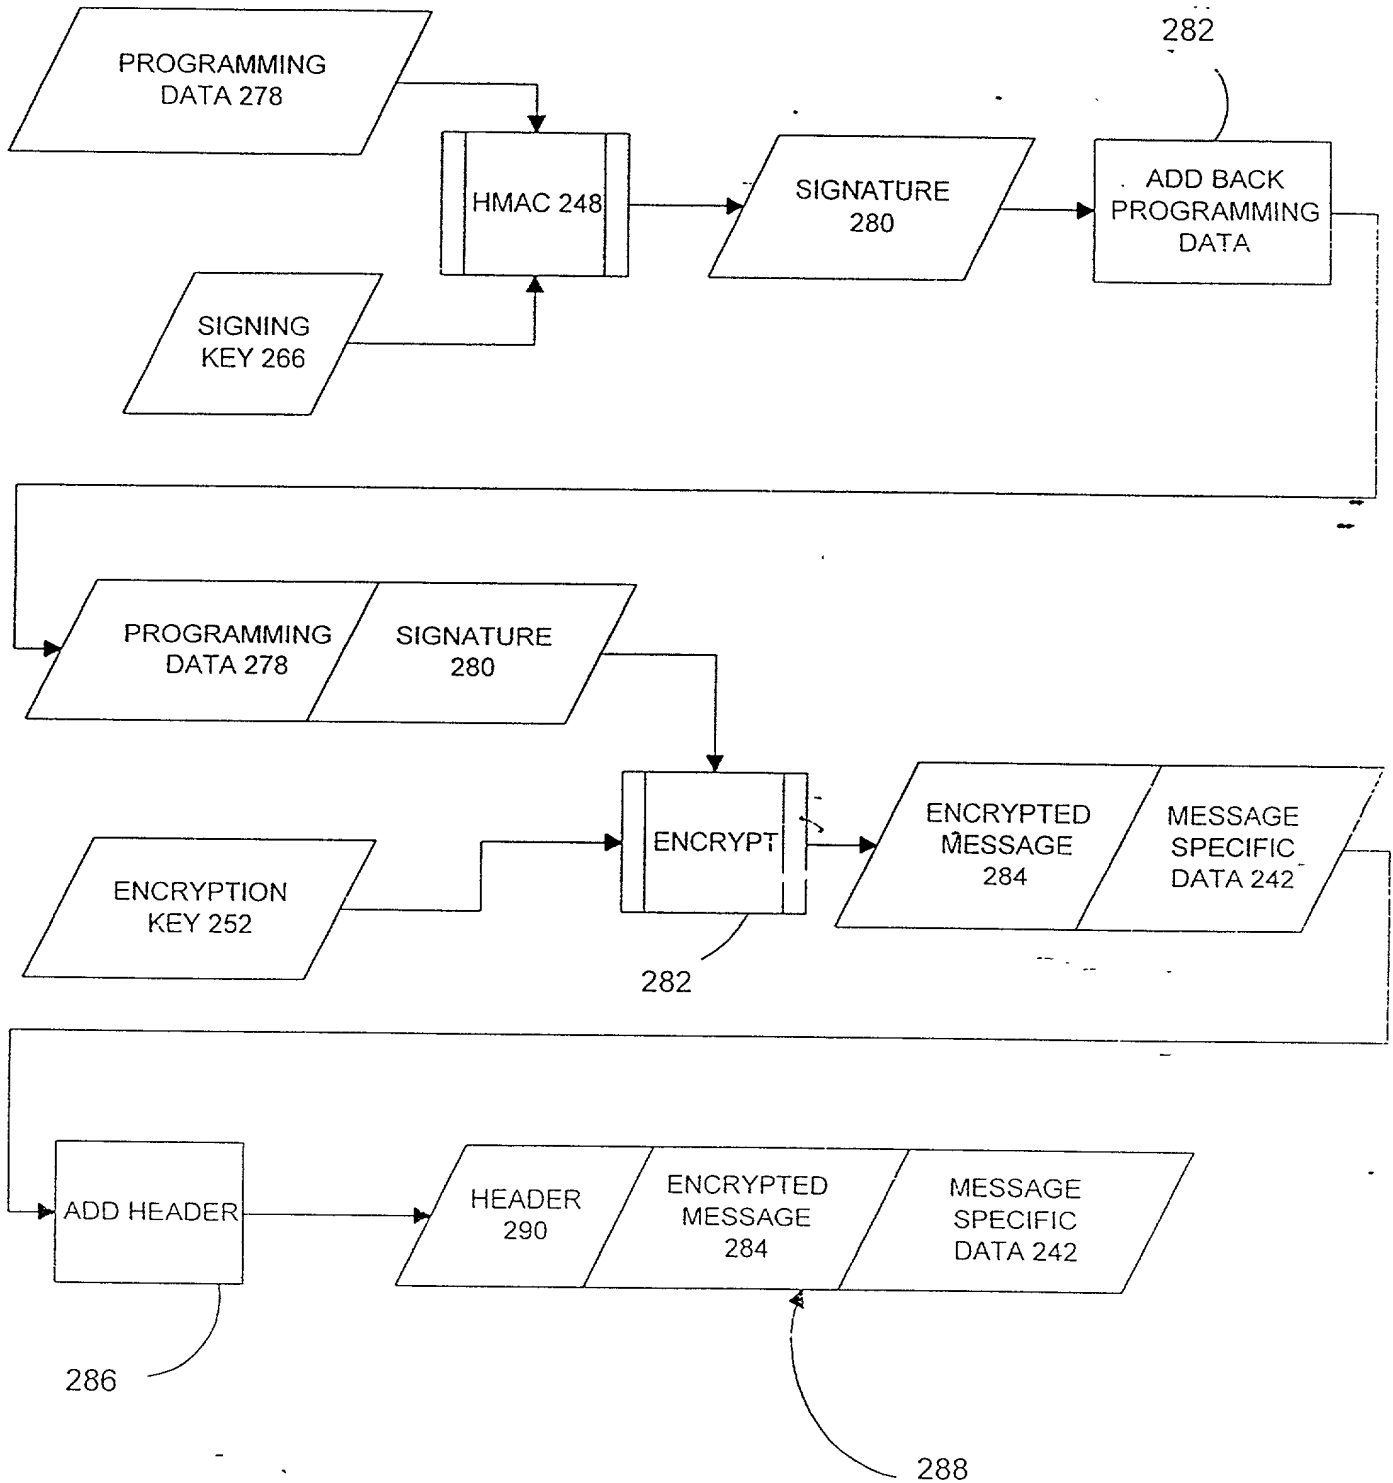 


FIG. 10B

FIG. 11A



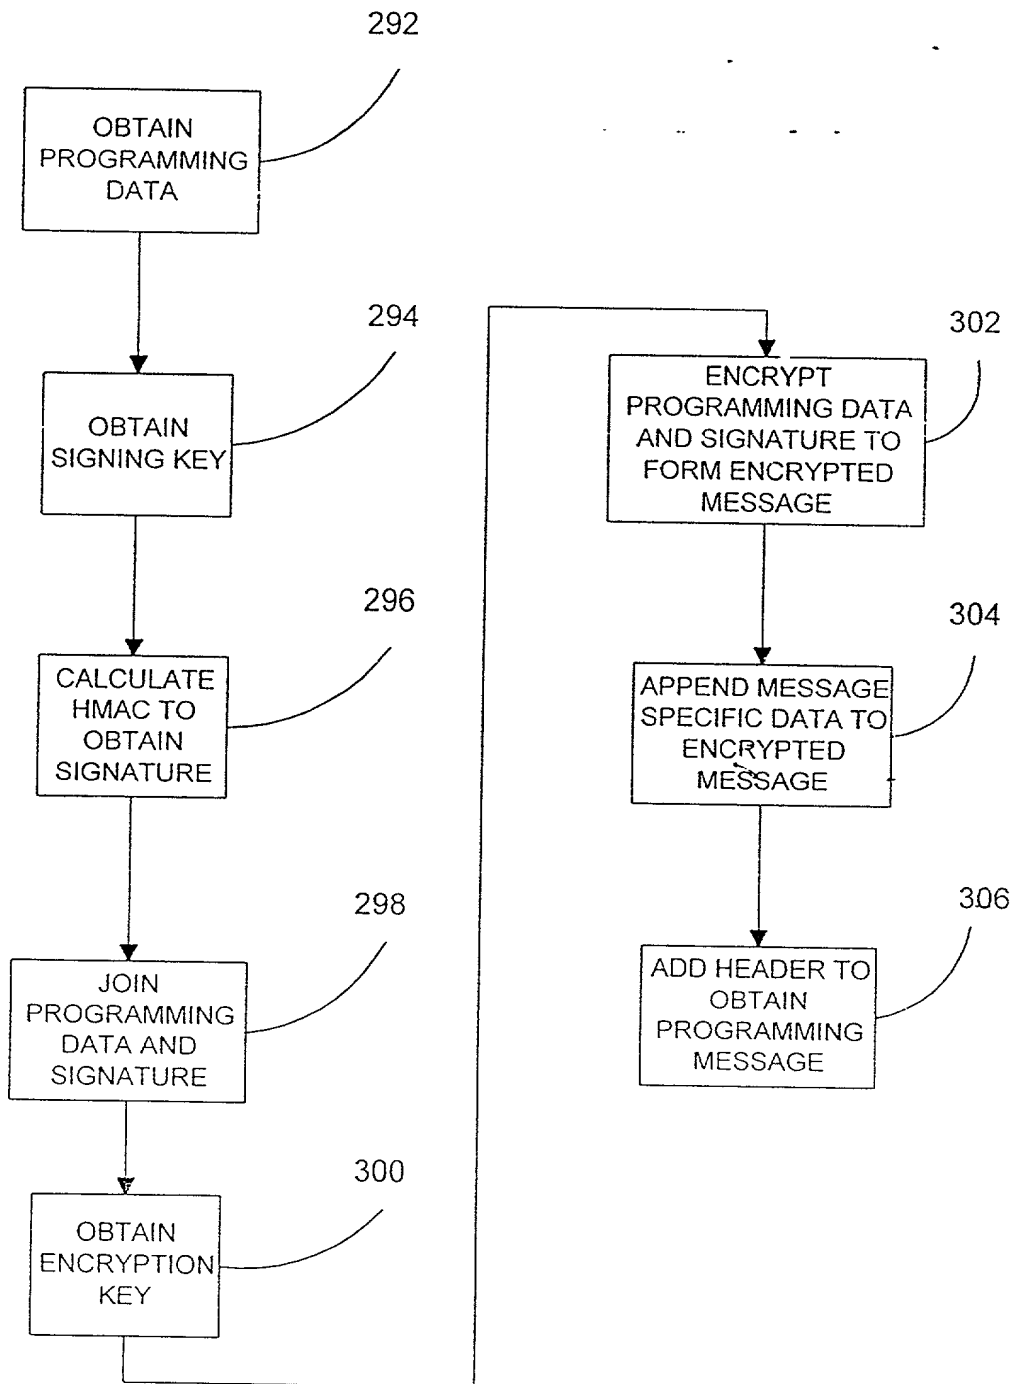 
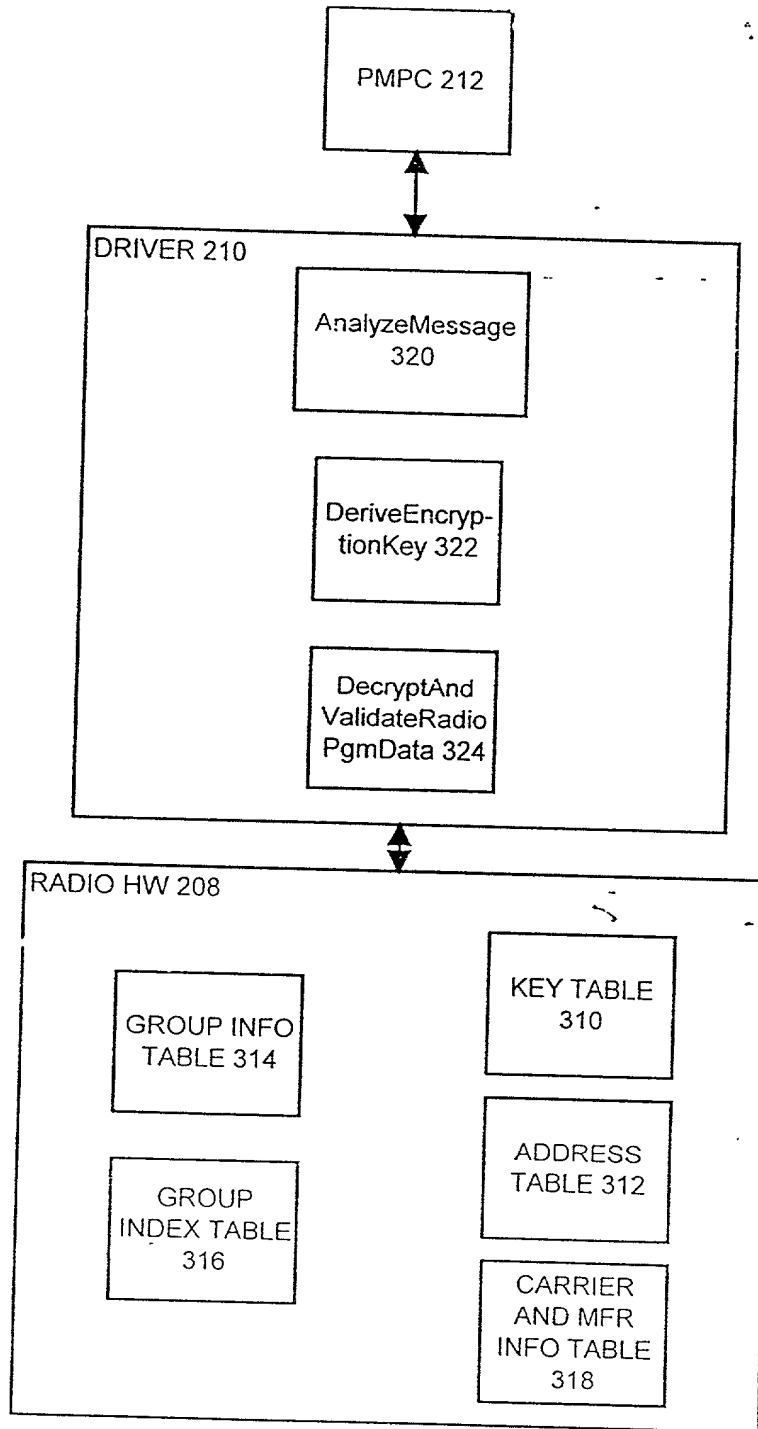 


FIG. 11B

FIG. 12A



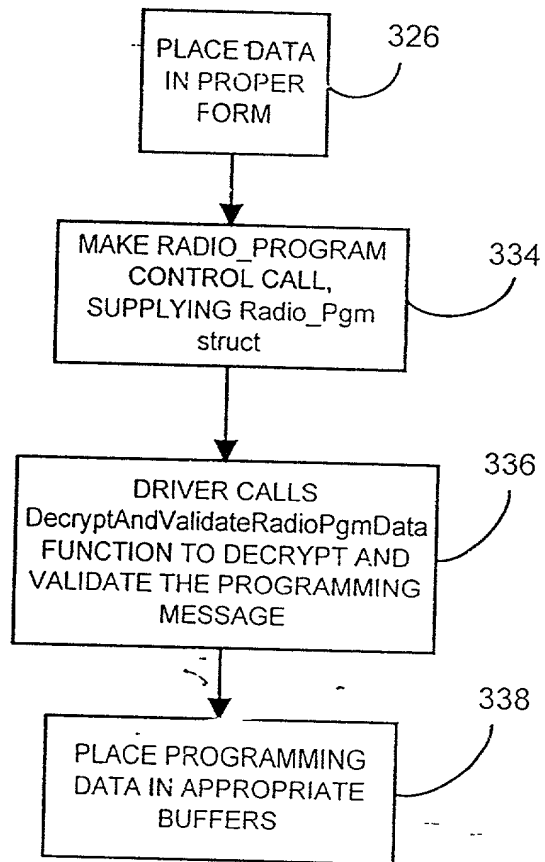 


FIG. 12B